

## WRMK Foil Quill Settings

<u>Cutter</u>	<u>Model</u>	<u>Foil Brand/Type</u>	<u>Material</u>	<u>Pressure</u>	<u>Speed *</u>	<u>Other Comments</u>
Black Cat	All	WRMK	fabric	36	45	
Brother	SNC	WRMK	cardstock	-2 (wide tip), -4 (med tip), -6 (fine tip)	1-3	
Cricut	Maker	WRMK	cardstock	light-medium cardstock	n/a	
Cricut	Explore	WRMK	cardstock	medium cardstock	n/a	
Gazelle						
KNK	Force	WRMK	cardstock	CD = 1-25**	15-20	Small Tip: lower CD, higher speed Large Tip: higher CD, lower speed
KNK	Maxx	WRMK	cardstock	30	50	
KNK	Maxx Air	WRMK	cardstock	25	60	
KNK	Maxx Air	WRMK	textured cardstock	30	30	
KNK	Zing	WRMK	cardstock	30	9	
KNK	Zing Air	WRMK	cardstock	30	12	
KNK	Zing Orbit	WRMK	cardstock	30	12	
Pazzles	Vue	WRMK	cardstock	15-25	2-3	use Pazzles Pen Spacer
Silhouette	Cameo 3	WRMK	cardstock	6-22	3-5	
Silhouette	Cameo	Spellbinders Glimmer	cardstock	22	7	
Silhouette	Curio	WRMK	cardstock	8	3	
Silver Bullet	Original	WRMK	cardstock	15-25	30-60	
Sizzix	eclips2	WRMK	cardstock	default settings for draw/pen		
Skycut	C16 or C24	WRMK	cardstock	30	3	
Skycut	D24	WRMK	cardstock	30	1	

\* To achieve even fills, slower speeds are recommended

\*\* KNK Force: If setting Z origin on the mat versus the material, a lower CD will be needed. Also, with the smallest tip, a lower CD is needed. Be conservative because the fine tip can break off if too much pressure is applied.