




## Setup for Printing From Create To Your Epson Printer<sup>1</sup>

1. File => Print Setup

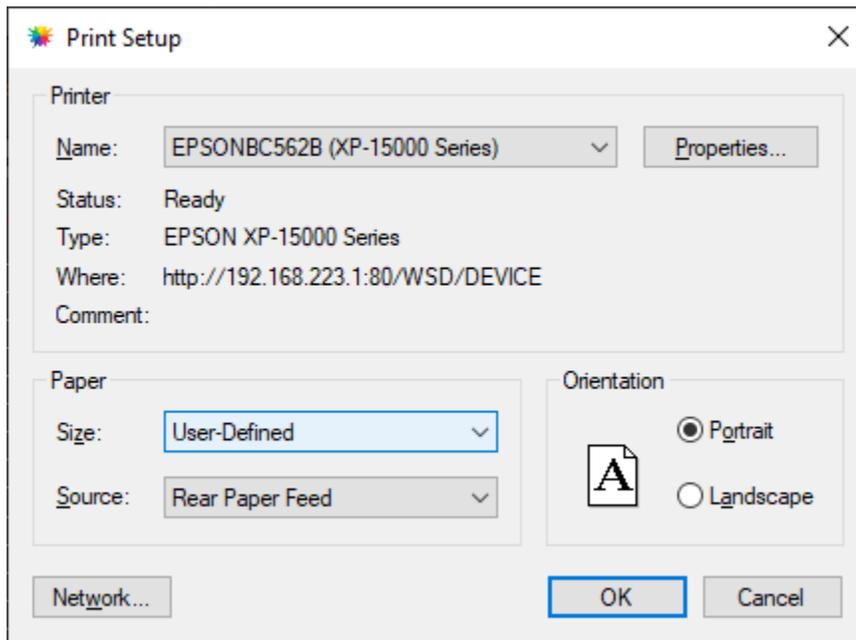


Note that User-Defined is chosen. This WILL NOT work, you need to SPECIFICALLY choose a proper provided paper size OR create a custom one starting with the option of User-Defined. NOTE: All paper names must be unique...so you cannot leave the name User-Defined as the name (you'll see in subsequent screens) or it won't work =).

---


<sup>1</sup> These steps will apply generally to all current model Epson printers including popular versions of the ET – EcoTank – models...some variations in screen captures are expected from model to model depending on printer features. For any help with setting up your printer, please find us online at Facebook, groups are listed at the end of this document for your reference.

2. Click **Properties**

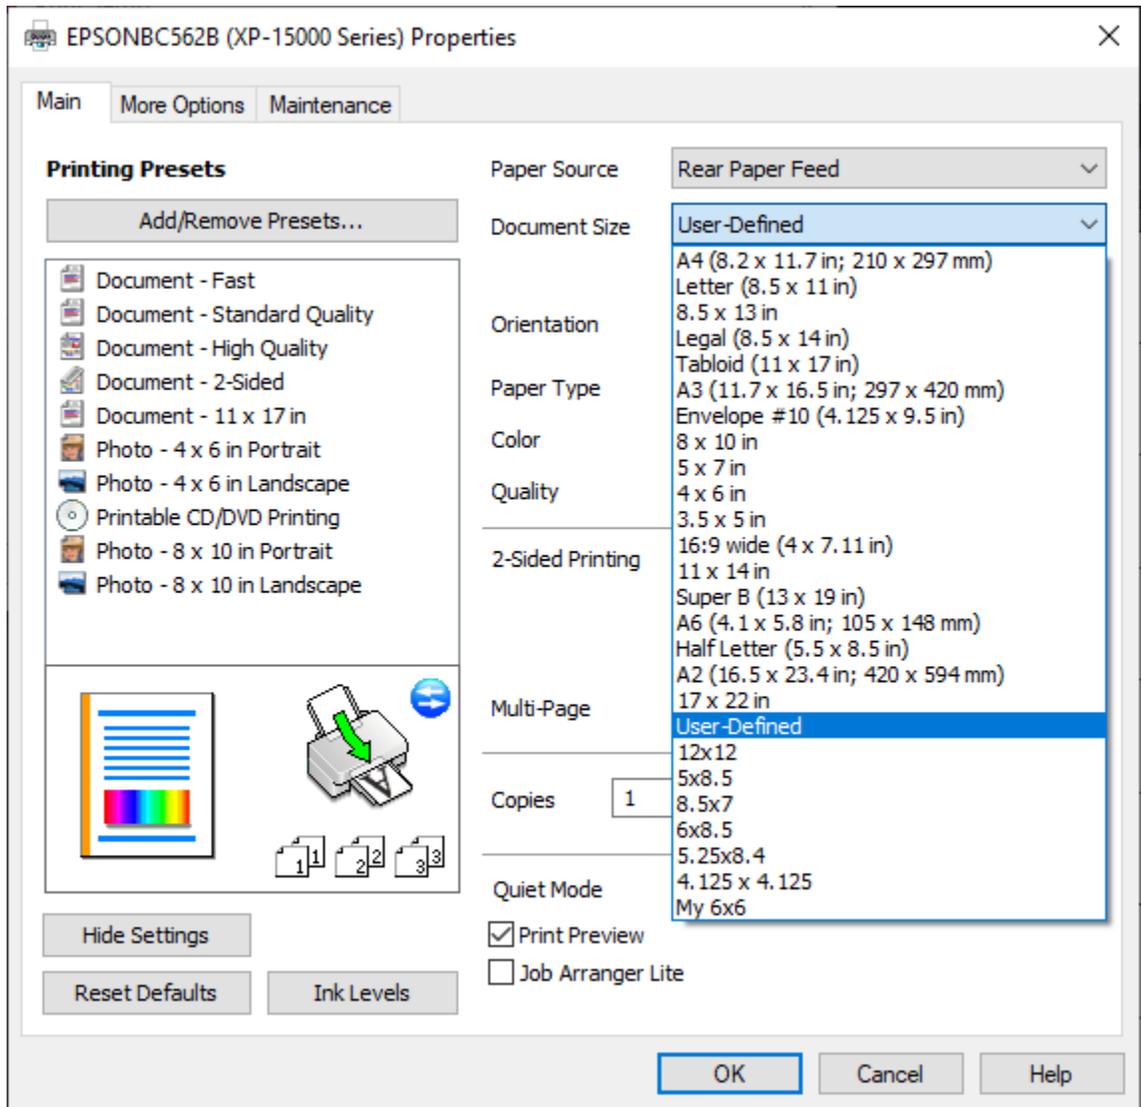

From Document Size choose User-Defined


Create new paper size, giving unique name and set the paper size:

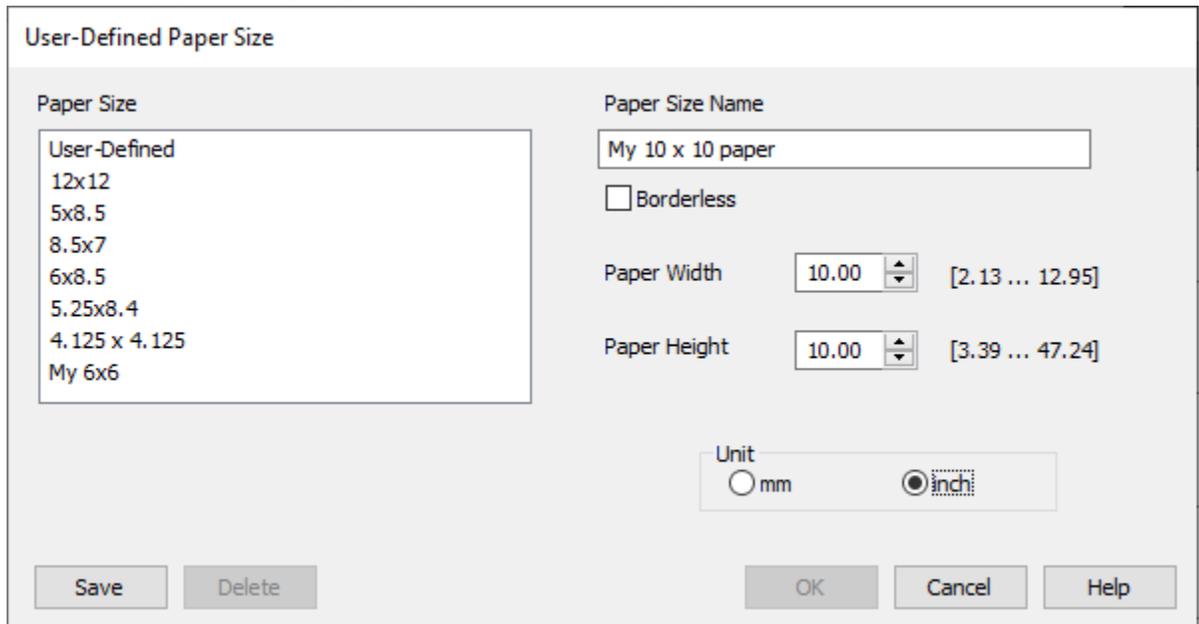

The dialog box is titled "User-Defined Paper Size". It features a list of paper sizes on the left, including "User-Defined", "12x12", "5x8.5", "8.5x7", "6x8.5", "5.25x8.4", "4.125 x 4.125", and "My 6x6". On the right, there is a text field for "Paper Size Name" containing "My 10 x 10 paper", a "Borderless" checkbox, and two spinners for "Paper Width" (10.00) and "Paper Height" (10.00). Below these are radio buttons for "Unit" with "mm" and "inch" options, where "inch" is selected. At the bottom, there are buttons for "Save", "Delete", "OK", "Cancel", and "Help".

3. Click SAVE
4. Click OK


- Now you are back at the printer properties with new paper size chosen

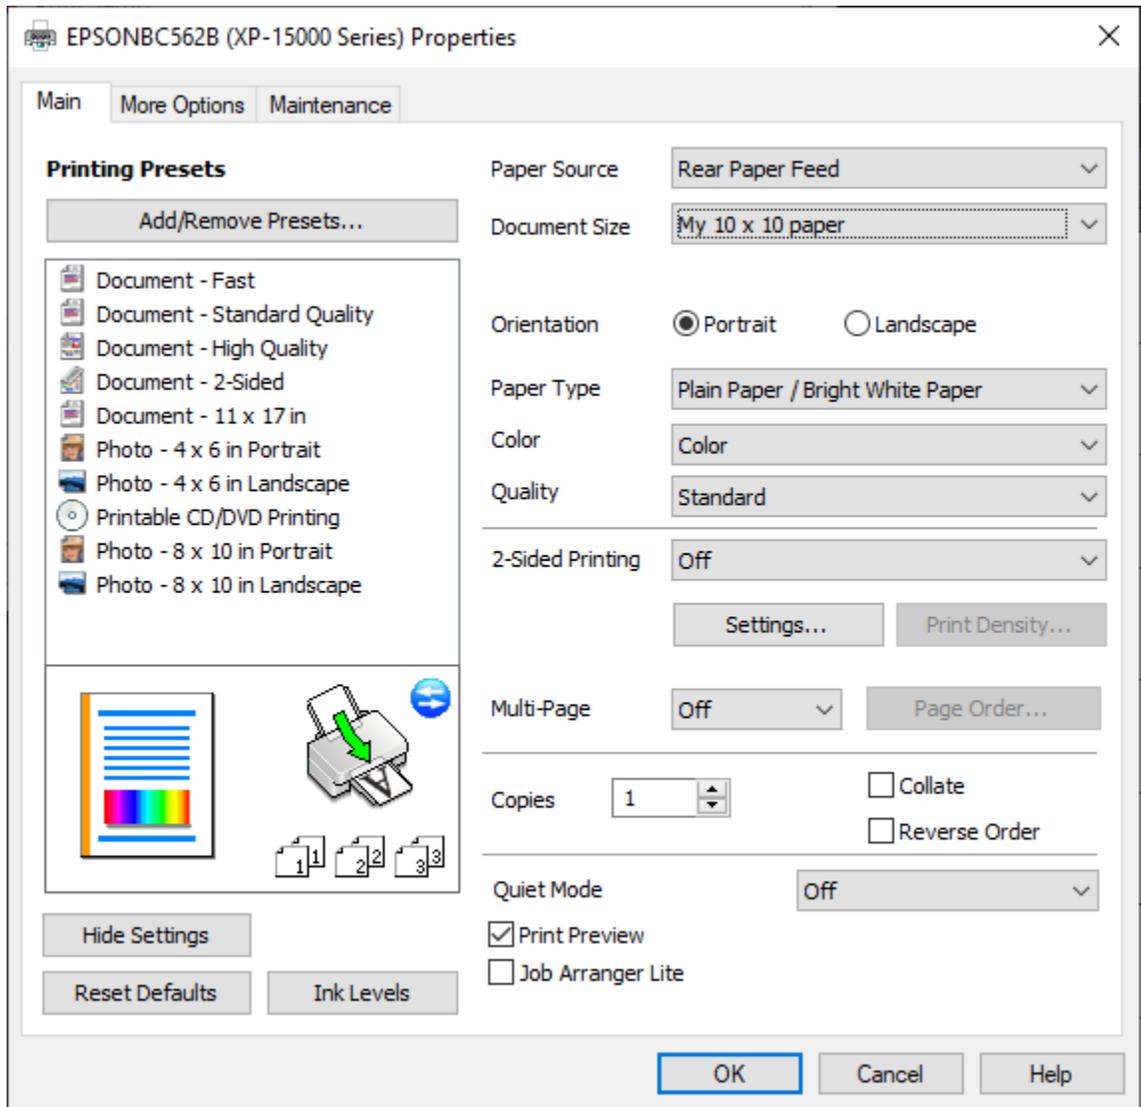


Checking **Print Preview** is a good thing, this gives you a chance to abandon printing and wasting good material if the print request is not right.

- Click OK

7. Now back to this screen where we started, HOWEVER the new paper size did not follow through from the previous screen and at this point your print will fail if you don't fix it.

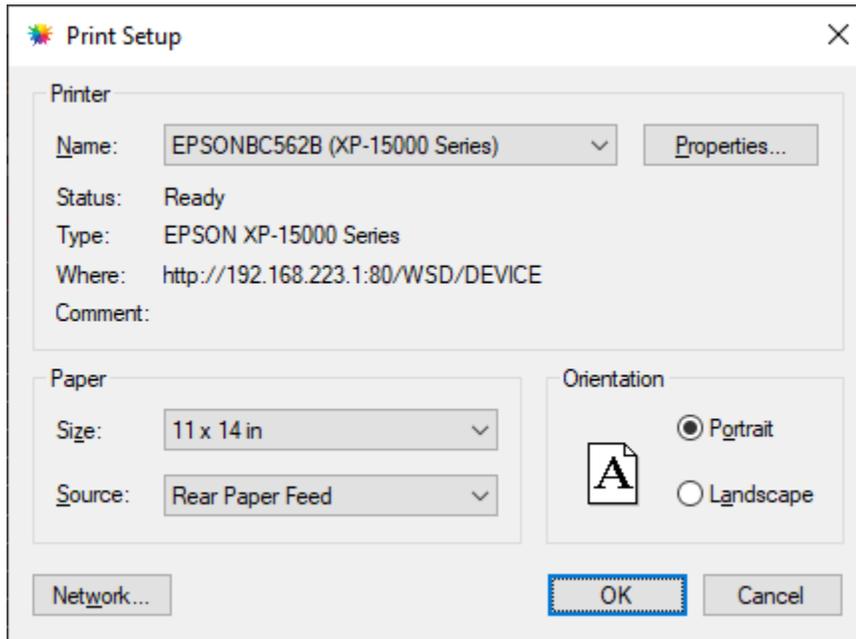


8. Here is the list of papers, NOTE the new one just created IS NOT on there – my 10 x 10!

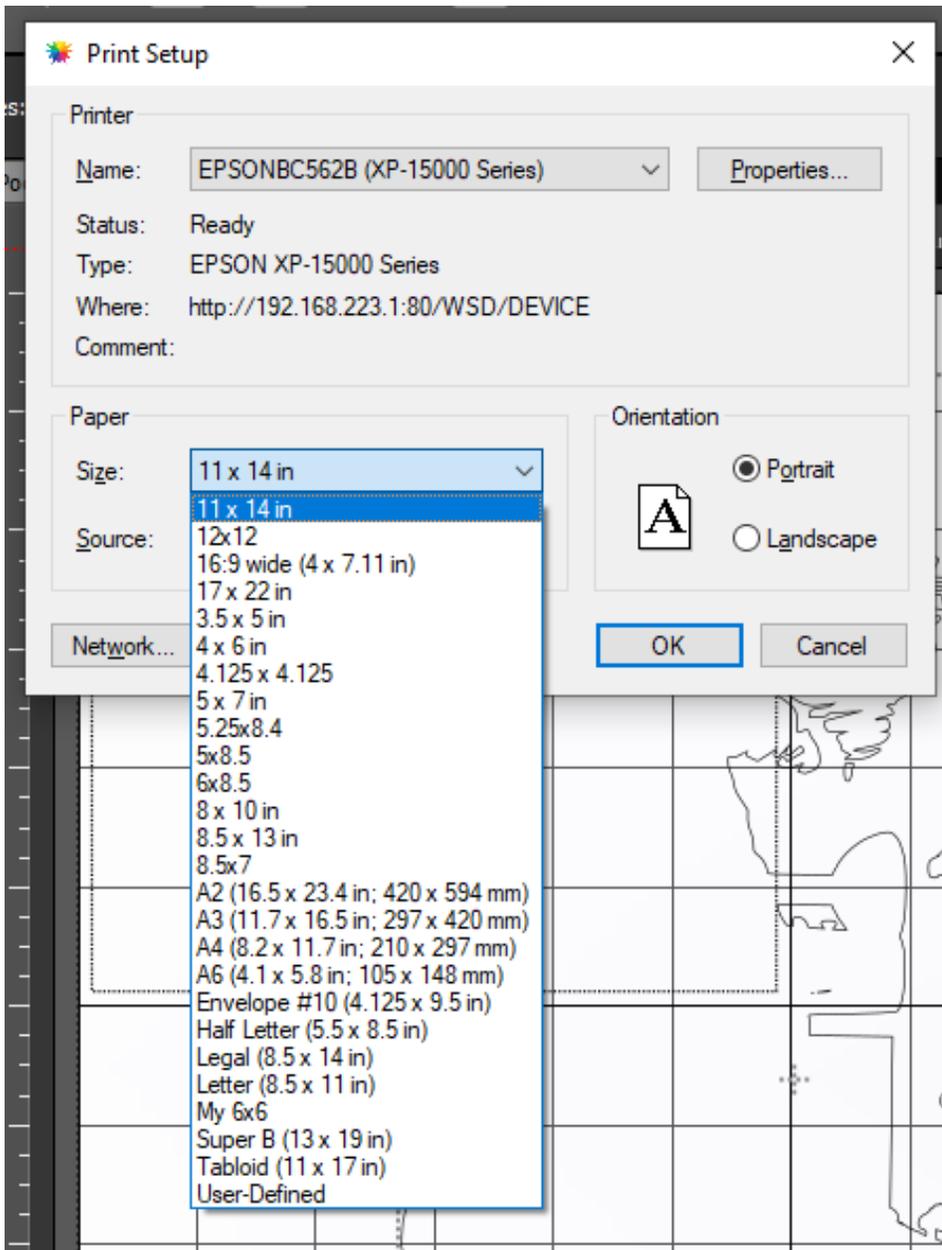


9. Click OK

10. **File => Print Setup =>** expand the **Paper Size** list:

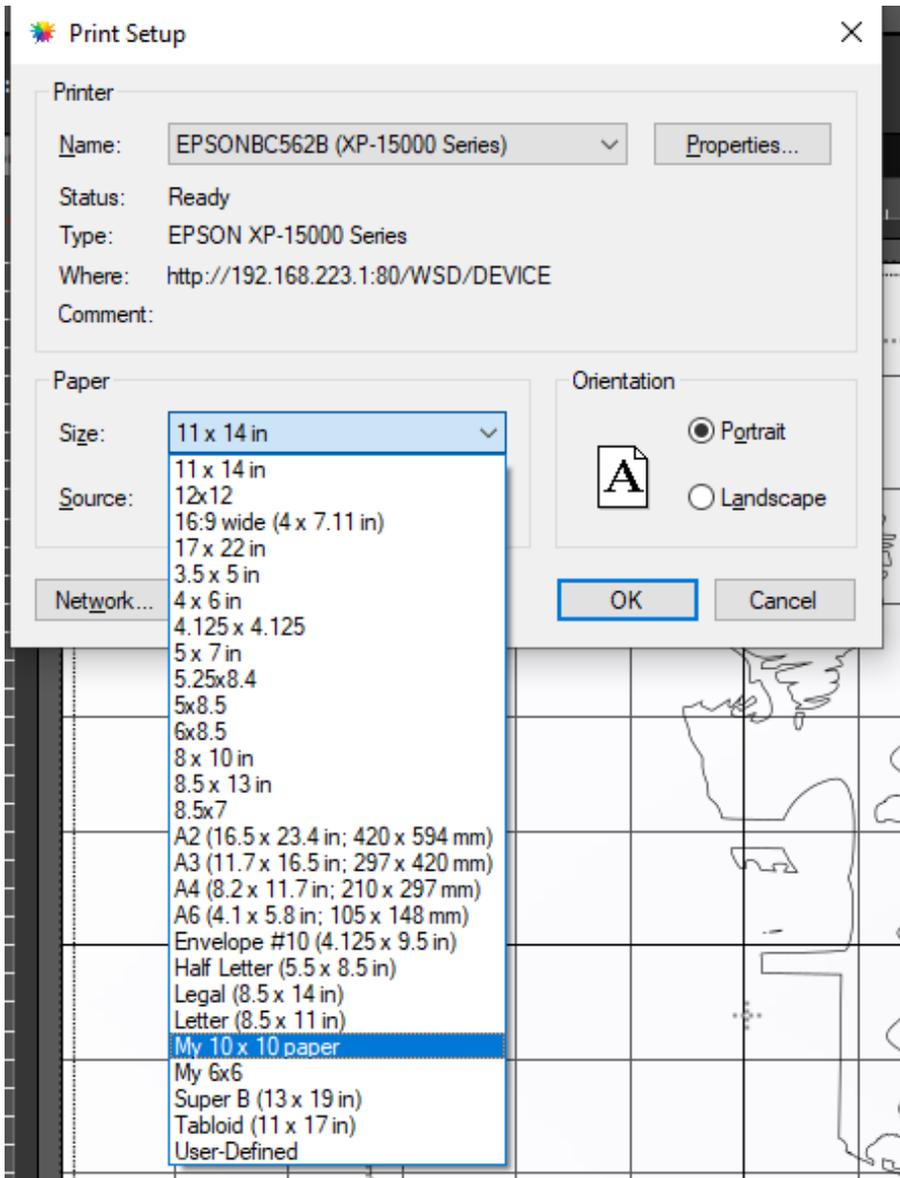


Now the new paper size is on the list, click it, then choose the correct **Paper Source**. If you do not and the paper size cannot fit the default tray, even though you can send the print job, NOTHING will print.

11. Here is the final Print Setup:

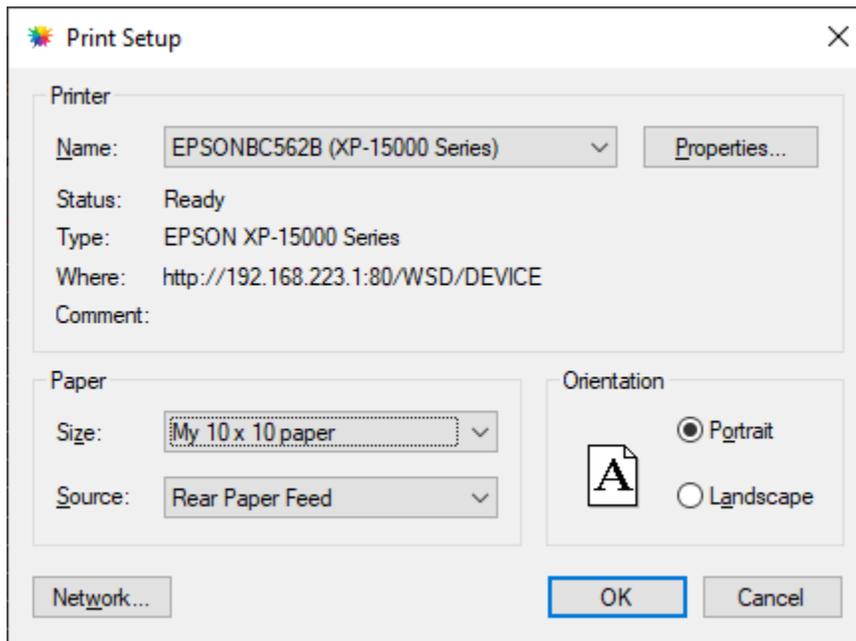


12. If you are using settings OTHER than Plain paper, and Standard Quality, be sure to click **Properties** to assign those attributes for this print job:

Examples:

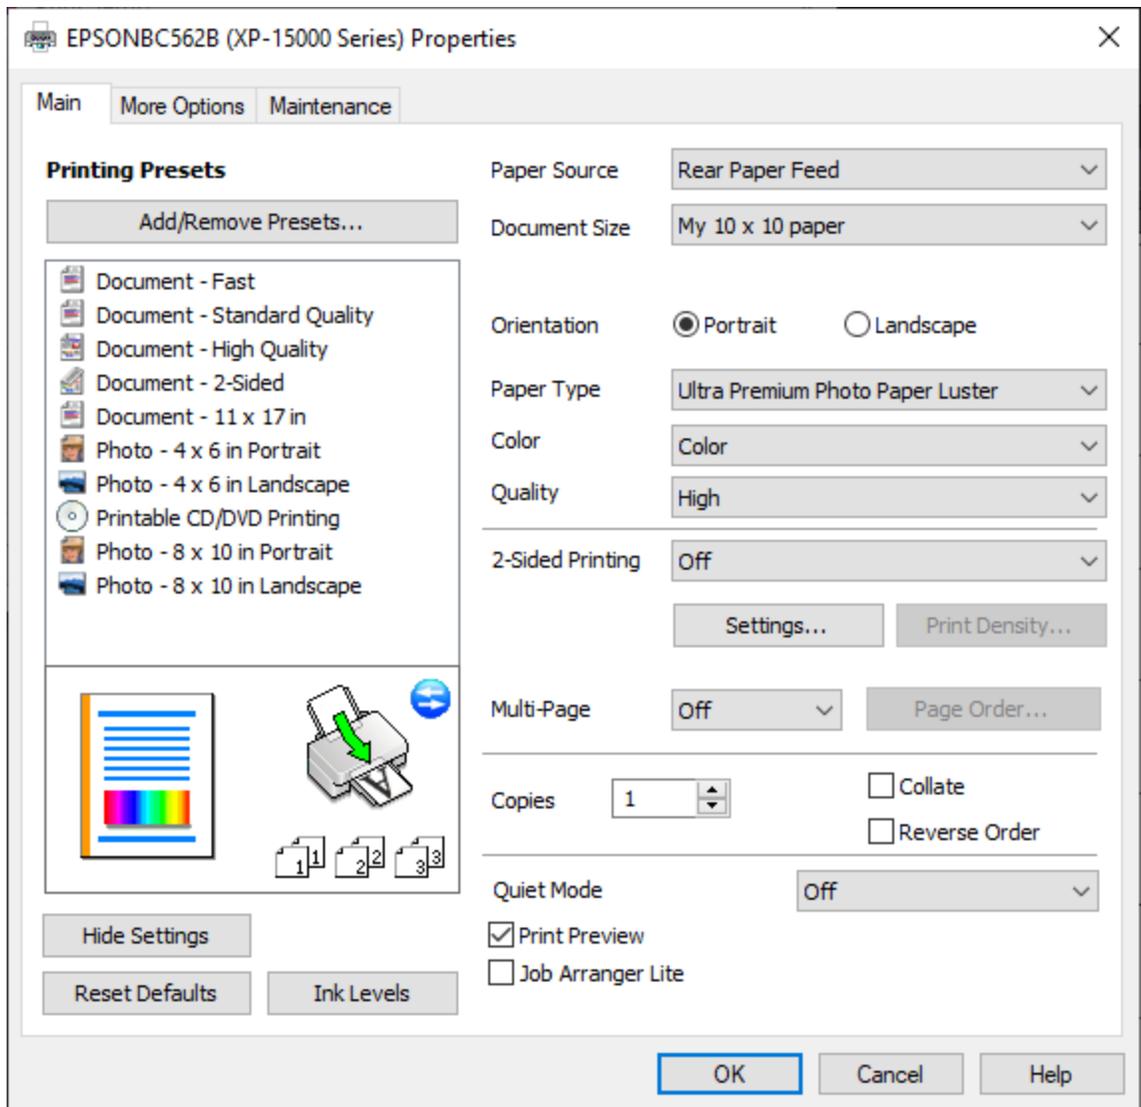

Click **More Options**

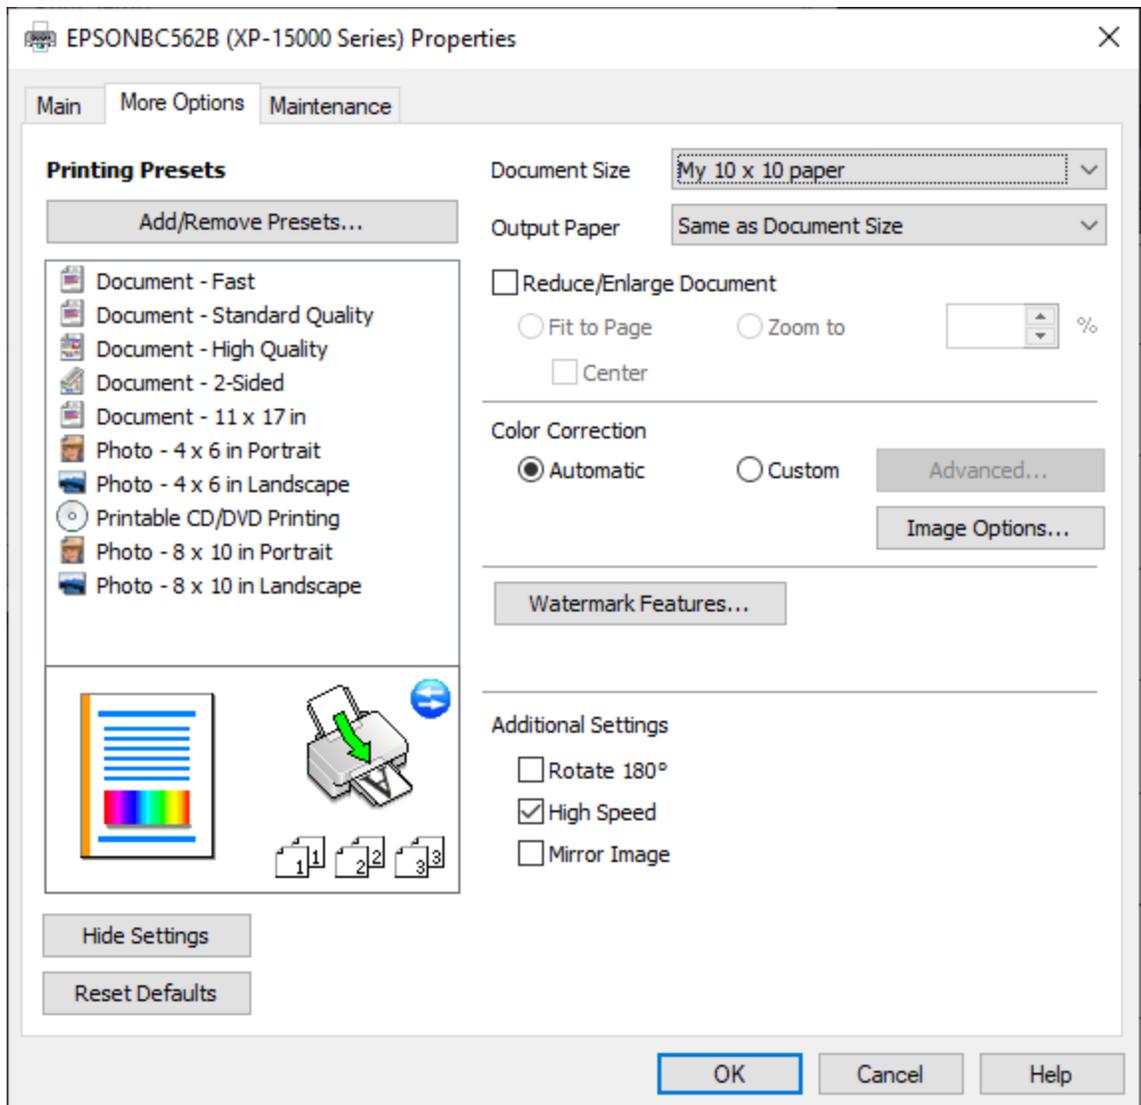

**Unchecking High Speed can help** if you are experiencing banding – a regular evenly spaced out gap of no-ink in the print. Here is an Epson document that may help with banding and other common printing problems:

[Epson Printer trouble shooting issues](#)

## RESOURCES

[Sandy McCauley's SOLO/Create Support page](#)

[SOLO User Manual](#)

[Create User Manual](#)

## **Additional Create/SOLO Facebook Resources**

[StarCraft Vinyl - Crafting with SOLO, CREATE, HD, and SoftFlex](#)

[StarCraft Solo & Create Software for Beginners!](#)

[SOLO 101 - StarCraft Solo - CREATE Software](#)